


How to assemble your mi-ergo chair

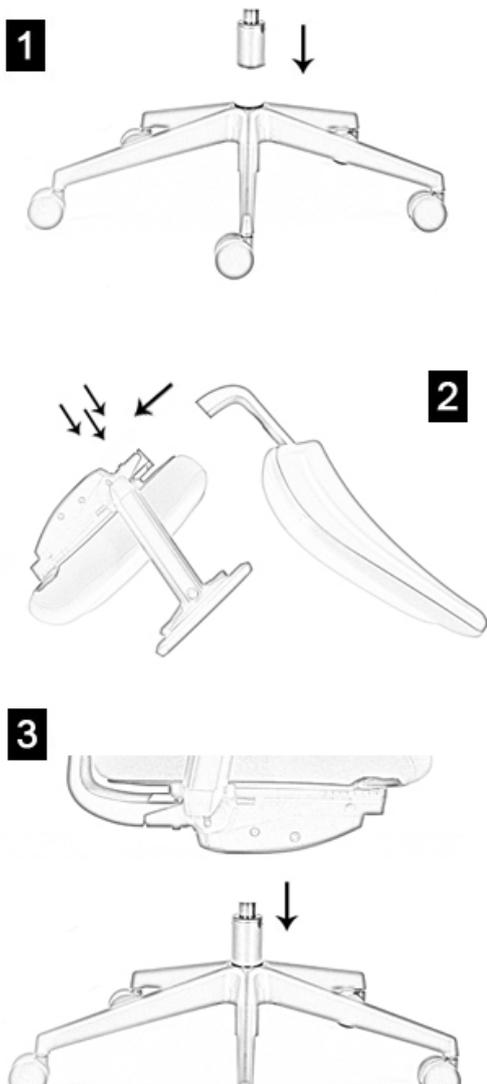

Key Information



2 Person Assembly Recommended.



Three Bolt Assembly.



1 x Allen Key (supplied) required for assembly.



This product can be assembled within 10 minutes.



This product is rated as EASY to assemble.



Check Chair Structure Every 3 Months for Max Stability.



Please note that this product will be heavy when assembled. Please ensure that if you need to lift or carry this product that you do not do this by yourself.

1 Locate the Gas Lift

Remove the 5 star base from the box and place it down on the floor. Remove the gas lift from the box and firmly push it into the hole located in the centre of the 5 star base. Please ensure that the gas lift is located securely before continuing to step 2.

2 Connect back to seat

Remove the seat assembly from the box and rest upside down on a hard surface. Using the bolts and allen key provided, secure the backrest to seat assembly by bolting through the 3 locating holes in underseat mechanism into threaded holes in metal black bar.

3 Connect chair assembly to base

Turn the completed chair top section back over and carefully locate the top of the gas lift into the circular hole in the centre of the under-seat mechanism. Your product is now assembled. Please ensure that all bolts are tight before using your product.

How to use your mi-ergo Mechanism



NEW mi-ergo Mechanism

Simplistic controls make this mechanism easy to use and ultra ergonomic. This chair has been developed to put the user in full control of their chair, enabling them to work in a position that is comfortable for them.

1) Seat Height Adjustment

Raise the paddle when seated to lower height of the seat, take your weight off the chair, and raise the paddle to increase the height of the seat.

2) Body Weight Tension Control

Through six preset positions, rotate the dial clockwise to increase the tension and rotate anticlockwise to decrease the tension.

3) Independent Back Angle Adjustment

Rotate the dial clockwise to close the angle of the backrest and rotate anticlockwise to open the angle of the backrest.

4) Synchronised Mechanism Tilt Lock

Raise the paddle to unlock the mechanism tilt, leave up for free-floating recline, or push back down to lock the tilt into one of four positions. Fully upright or three reclined positions.

5) Forward Seat Tilt

Whilst the tilt mechanism is un-locked, (see Point 4) rotate the dial forwards to unlock the forward seat tilt, you will need to slightly recline to hear a small click, then return upright for the forward seat. To lock, rotate the dial backwards and then recline again, when you return to upright the seat will be flat.

6) Triple Reactive Lumbar Support

To inflate the triple reactive lumbar support, squeeze the bulb to reach the desired amount of support, to deflate push the button at the top of the bulb to release the air.

7) Seat Slide Adjustment

Pull out the telescopic lever and rotate forwards to increase the seat depth up to 75mm and push back in to lock in place. To decrease the seat depth, pull the lever out and rotate backwards then push to lock back in.

8) Inflatable Thoracic Support

To inflate the thoracic support, squeeze the bulb to reach the desired amount of support, to deflate push the button at the top of the bulb to release the air.

*** Please note that this product carries a maximum weight limit of 150kg ***